

# **OWNER'S TECHNICAL MANUAL**

Stainless Steel Push Pull Drum Pump

#### Description

The 733 stainless steel drum pump is a manually operated drum pump designed specifically for the transfer of Chemicals and Solvents from 60 Litre or 205 Litre Drums. The pump is made of stainless steel or teflon components for exceptional chemical resistance. It is lightweight at only 3.0kgs and has an adjustable discharge spout. There are no aluminium parts which makes this pump suitable for use in underground mines. The 733 can transfer liquids at a rate of 20 Litres per minute.

#### **Specifications**

Suitable for	Acids, alkalis, ink, herbicides, pesticides, chemicals and solvents from 60 or 205L drums
Discharge Quantity	0.50 litres per stroke / 20 litres per minute
Materials	Stainless and teflon
Weight	3.0kgs
Bung Adaptor	2 " BSP standard bung adaptor. Others available.


#### **Operating Instructions**

- 1 Lift the T handle 3 or 4 times and then the pump is primed and ready to operate.
- 2 When you are finished transferring the chemical, solvent or acid being pumped, please ensure that all fluid is dispensed from the pump otherwise the fluid may set in the pump or may attach the Teflon seals within the pump.
- 3 When you lift the T handle and piston rod, the pump is being primed and when you push down on the T handle, the fluid within the pump will be dispensed.
- 4 The 733 stainless steel drum pump has a flapper valve at the bottom of the pump and it is this valve that enables the pump to transfer fluid. If the pump fails to transfer fluid most likely you will require a new flapper valve Part No. 733-12.
- 5 Other packings including Part No's 733-12, 733-4 and 733-7 may also need replacing over time.

Thank you for choosing to use an Alemite product for your transfer needs and should you have any questions in regard to the assembly or operation of your new Alemite Lubrequip 733 push pull action chemical & solvent transfer drum pump we look forward to hearing from you on the appropriate state phone no below

NSW	QLD/PNG	VIC/TAS	WA	SA/NT	NZ
TEL: (02) 9939 0711	TEL: (07) 3889 8480	TEL: (03) 8787 8288	TEL: (08) 9209 3066	TEL: (08) 8241 7111	TEL: (09) 447 1007
FAX: (02) 9939 0411	FAX: (07) 3889 8490	FAX: (03) 8787 8266	FAX: (08) 9209 3933	FAX: (08) 8241 7011	FAX: (09) 447 1008

## Parts And Drawing Breakdown For The 733

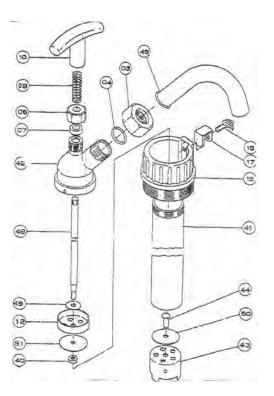

### **Ordering Spare Parts**

Parts List - Part No. 733

ITEM	PART NO	DESCRIPTION	MATERIAL	QTY
3	733-3	Coupling Nut	304SS	1
4	733-4	Spout Seal	Teflon	1
6	733-6	Packing nut	304SS	1
7	733-7	Packing	Teflon	1
9	733-9	Spring	SS41	1
10	733-10	Handle	Nylon	1
12	733-12	Upper Piston	Teflon	1
15	733-15	Adaptor	Polypropylene	1
16	733-16	Screw	SS41	1
17	733-17	Safety Plate	SS41	1
15, 16, 17	733-15-16-17	Adaptor complete	316SS	1
40	733-40	Hex Nut	304SS	1
41	733-41	Cylinder Body	304SS	1
42	733-42	Cylinder Cap	304SS	1
43	733-43	Lower Piston	304SS	1
44	733-44	Rivet	304SS	1
45	733-45	Spout	304SS	1
48	733-48	Piston Rod	304SS	1
49	733-49	Upper Piston Washer	304SS	1
50	733-50	Piston Washer	304SS	1
51	733-51	Piston Washer	304SS	1

### **Trouble Shooting**

PROBLEM	REASON	REMEDY
Pump will not prime	Faulty flapper valve (733-12)	Replace flapper valve
Pump leaking	Faulty rod packing (733-7)	Replace rod packing
Pump will not connect to drum	Non standard drum	Contact local distributor and discuss the issue with him
		(Mauser type or Trisure buttress bung adaptor required)

NSW TEL: (02) 9939 FAX: (02) 9939			WA TEL: (08) 9209 3066 FAX: (08) 9209 3933		NZ TEL: (09) 447 1007 FAX: (09) 447 1008	
	Visit our w	vebsite at www.alemlube.	com.au Email - ir	nfo@alemlube.com.au	I	2